

7929 Lincoln Ave. Riverside, CA 92504
 Phone: 951.689.ICON Fax: 951.689.1016

PART #	DESCRIPTION
64040	2005-2010 FSD RADIUS ARM DROP KIT

COMPONENTS INCLUDED	
(2) 164001 05-10 FSD RADIUS ARM DROP BRACKET	(1) 64040H HARDWARE KIT
HARDWARE INCLUDED	
64040H HARDWARE KIT	
(4) 605200 7/16-14 X 1.500 (4) 605220 7/16-14 LOCK NUT (8) 605230 7/16 SAE FLAT WASHER	(4) 605601 3/4-10 X 5.500 (4) 605620 3/4-10 NYLOCK NUT (8) 605630 3/4 SAE FLAT WASHER
TOOLS REQUIRED	
JACK JACK STANDS TORQUE WRENCH 5/8" SOCKET / WRENCH 1 1/8" SOCKET / WRENCH	10MM SOCKET / WRENCH 13MM SOCKET / WRENCH 15MM SOCKET / WRENCH 18MM SOCKET / WRENCH 24MM SOCKET / WRENCH 27MM SOCKET / WRENCH
TECH NOTES	
N/A	



WARNING!

**** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!**

**** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS.**

**** ICON VEHICLE DYNAMICS RECOMMENDS ALL INSTALLTION TO BE PERFORMED BY A PROFESSIONAL SHOP/SERVICE TECHNICIAN. PRODUCT FAILURE CAUSED BY IMPROPER INSTALLATION WILL NOT BE COVERED UNDER ICON'S WARRANTY POLICY.**

INSTALLATION

NOTE: If installing in conjunction with ICON box kit, skip to step 7.

- Using a properly rated jack, raise the front of the vehicle and support the frame rails with jack stands. Ensure the jack stands are secure and set properly before lowering the jack. NEVER WORK UNDER AN UNSUPPORTED VEHICLE. Remove the front wheels.
- Remove the sway bar links from the sway bar using an 18mm socket/wrench. Leave them connected to the differential. [FIGURE 1]

FIG.1


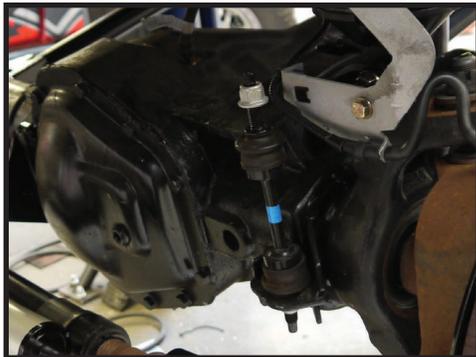


FIG.2

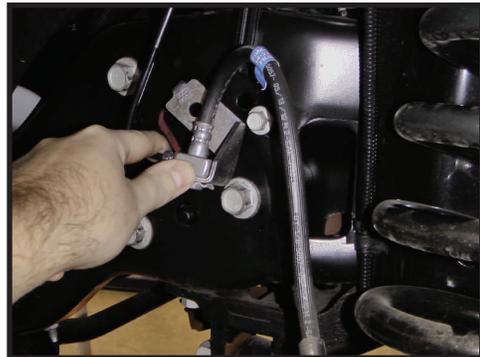

- Disconnect the upper brake line brackets from the frame using a 13mm socket/wrench and lower brake line brackets from the differential using a 10mm socket/wrench. [FIGURE 2]

4. On the driver side of the track bar remove the nut and the upper track bar bolt using two 30mm sockets/wrenches. [FIGURE 3]

FIG.3



5. Support the axle with a floor jack and remove the front shocks. The shocks are limiting droop so make sure the axle is securely supported or it will drop when the shocks are removed. Use an 18mm socket/wrench to remove the lower bolt.

6. As you slowly lower the axle, the coils will unload from the mounts. Be careful not to stretch or damage any lines connected to the differential or radius arms.

7. Some trucks have a transfer case skid plate that must be removed first. Use a 15mm socket/wrench to loosen and then remove the nut clips from the frame.

8. With both coils unloaded, the radius arms have little force on them and can be safely removed from the frame mount. Use a 27mm and a 30mm socket/wrench.

9. Position the driver side radius arm bracket into the stock radius arm pocket. Loosely install the supplied (605601) bolts with (605230) washers into the front frame and radius arm bracket holes.

10. Rotate the bracket up until it meets the frame. Install (605200) bolts with (605230) washers and (605220) lock nuts through the 2 holes in the bottom of the frame rail. [Torque to 55 ft-lbs]

11. Install two (605601) bolts in the remaining frame/bracket hole.

12. You should have both of the frame brackets installed loosely on the vehicle. [Torque 3/4 bolts to 260 ft-lbs] [Torque stock bolts to factory spec]

13. Move the radius arms up into the pockets of the drop bracket and install the factory bolt. Hand tighten using a 27mm and a 30mm socket/wrench.

14. Use a jack to raise the axle high enough to install the shocks. Be careful not to lift the truck off of its supports.

15. Tighten the front shocks using an 18mm socket/wrench. [Torque to factory spec]

16. Install the sway bar to the sway bar links, then tighten using an 18mm socket/wrench. [Torque to factory spec]

17. Connect the track bar using the factory bolt and two 30mm sockets/wrenches. [Torque to factory spec].

18. Install the upper brake line brackets using a 13mm socket/wrench and lower brake line brackets using a 10mm socket/wrench. [Torque to factory spec]

19. Install the front wheels and lower the vehicle back to the ground. [Torque to factory spec]

20. With the vehicle on the ground, tighten the radius arm pivot bolts. [Torque to factory spec]

21. Have the vehicle professionally aligned.

VERIFY ALL FASTENERS ARE PROPERLY TORQUED BEFORE DRIVING VEHICLE.

RETORQUE ALL NUTS, BOLTS AND LUGS AFTER 100 MILES AND PERIODICALLY THEREAFTER.

ICON VEHICLE DYNAMICS LIMITED LIFETIME WARRANTY

ICON Vehicle Dynamics warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. ICON Vehicle Dynamics does not warrant the product for finish, alterations, modifications and/or installation contrary to ICON Vehicle Dynamics instructions. ICON Vehicle Dynamics products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada.

ICON Vehicle Dynamics' obligation under this warranty is limited to the repair or replacement, at ICON Vehicle Dynamics' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty. Items that are subject to wear are not considered defective when worn and are not covered.

ICON Vehicle Dynamics components must be installed as a complete kit as shown in our current application guide. Any substitutions or exemptions of required components will immediately void the warranty. Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.

ICON VEHICLE DYNAMICS

PERFORMANCE SUSPENSION SYSTEMS AND SHOCK ABSORBERS

7929 Lincoln Ave. Riverside, CA 92504 Phone: 951.689.ICON Fax: 951.689.1016
www.iconvehicledynamics.com



FOLLOW US ON FACEBOOK!

